

Maintenance Schedule

Service at indicated distance or time whichever comes first	Km X 1000	1	10	20	30	40	50	60	70	80	90	100	110	120	130	140	150	160	170	180	190	200
	Months	1	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
Replace engine oil and oil filter	Every 6 months or 10,000 Km																					
Replace air cleaner element	Every 20,000 Km																					
Inspect valve clearance	Every 40,000 Km																					
Replace fuel filter										•								•				
Replace spark plug	Every 40,000 Km																					
Inspect drive belt			•		•					•				•				•				•
Inspect idle speed														•								
Replace engine coolant	At 10 years, or 2,00,000 Km then after every 5 years or 1,00,000 Km																					

MAINTENANCE SCHEDULE

CONTINUED

Maintenance 21