

MEDIA-NAV

Contents

Precautions during use	GB.3
General information	GB.5
General description	GB.5
Introduction to the controls	GB.8
Switch on/off	GB.10
Operate and use	GB.11
Volume	GB.13
Radio / AUX	GB.14
Listen to the radio	GB.14
Auxiliary audio sources	GB.17
Audio setting	GB.20
Navigation	GB.21
The navigation system	GB.21
Read a map	GB.22
Entering a destination	GB.25
Guidance	GB.31
Map settings	GB.36
Managing the favourites	GB.37
Navigation settings	GB.39
Bluetooth device	GB.43
Pairing/unpairing Bluetooth® devices	GB.43

Connecting/disconnecting Bluetooth® devices	GB.45
Phone Book	GB.46
Making a call	GB.47
Receiving/during a call	GB.48
System settings	GB.49
Updating the system	GB.51
Operating faults	GB.54

All rights including rights vested in the software, content and other materials installed and running in the car as well as displayed trademarks and logos, are reserved by their respective owners.

PRECAUTIONS DURING USE

It is essential to follow the precautions below when using the system, both in the interest of safety and to prevent material damage. You must always comply with the laws of the country in which you are travelling.



Precautions when operating the system

- Operate the controls (on the dash or near the steering wheel) and read the information on the screen only when road conditions allow.
- Set the volume to a reasonable level so that outside noise can be heard.

Precautions regarding navigation

- Use of the navigation system does not in any way replace the responsibility or vigilance of the driver when driving the vehicle.
- Depending on the geographical zones, the system may not have the latest information on new roads. Be alert. In all cases, Road Traffic Regulations and road signs always take precedence over the directions of the navigation system.

Precautions concerning the equipment

- Do not attempt to dismantle or modify the system, as there is a risk of damage to equipment and fire.
- Contact a representative of the manufacturer in the event of malfunction and for all operations involving disassembly.
- Do not insert foreign bodies into the player.

Precautions when using the phone

- There are laws which govern the use of phones in vehicles. They do not necessarily authorise the use of hands-free phone systems under all driving conditions: drivers must be in control of their vehicles at all times;
- Using a phone whilst driving is a significant distraction and risk factor during all stages of use (dialling, communicating, searching for a number in the handset memory, etc.).

The description of the models given in this manual is based on the specifications at the time of writing. This manual covers all existing functions for the models described. Whether or not they are fitted depends on the equipment model, options selected and the country where it is sold. This manual may also contain information about functions to be introduced later in the year.



GENERAL DESCRIPTION (1/3)

Introduction

Your vehicle's multimedia system performs the following functions:

- RDS radio;
- management of auxiliary audio sources;
- hands-free phone;
- navigation assistance.

Radio functions

The multimedia system can be used to listen to FM (frequency modulation), and AM (amplitude modulation) radio stations.

The RDS system makes it possible to display the name of some stations and also for information messages sent by FM stations to be heard automatically:

- traffic bulletins;
- news bulletins;
- emergency messages.

Auxiliary audio function

You can listen to your personal stereo directly through your vehicle's speakers. There are several ways of connecting your personal stereo, depending on the type of device you have:

- 3.5 mm Jack socket;
- audio multi-connection unit (USB);
- Bluetooth® connection.

For more information on compatible devices, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

GENERAL DESCRIPTION (2/3)

Hands-free phone function

The hands-free Bluetooth® phone system makes the following functions possible without having to handle your phone:

- send/receive/suspend a call;
- transfer the list of contacts from the phone memory;
- access the call logs for calls which have come through the system;
- dial emergency numbers.

Telephone compatibility

Some phones are not compatible with the hands-free system, and do not enable you to use all of the available functions or do not provide the best possible sound quality.

For more information on compatible telephones, contact your approved manufacturer's dealer or visit the manufacturer's website, where available.

Navigation assistance function

The navigation system automatically calculates the geographical position of the vehicle by receiving GPS signals.


It suggests a route to your chosen destination using its road map.

Finally, it indicates the route to take, step by step, using the display screen and voice messages.



Your hands-free phone system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

GENERAL DESCRIPTION (3/3)

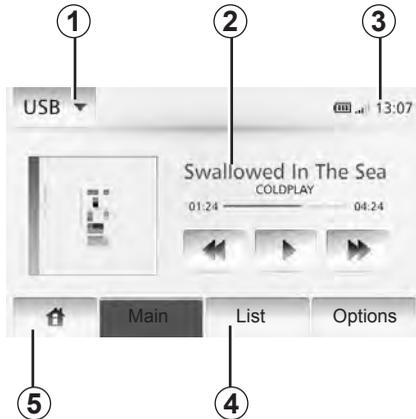

Displays

Menu screen

1 Mode selection area:

- showing the selected mode;
- when mode area is touched, rest of the area will be showing mode list.

2 Contents Area

showing the contents of menu item and information.

3 Time area:


- showing the current time;
- if Bluetooth is connected, it is displayed in the indicator area.

4 Menu area:

- display subordinate menu of mode;
- showing current menu as high-lighted color.

5 Home area

Home or Back button: goes back to the home menu or previous screen.

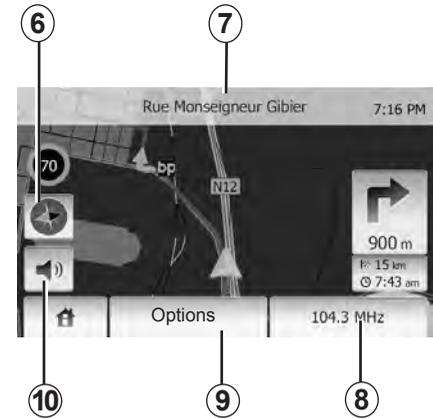

Navigation screen

6 Map view mode (2D/3D)

7 Current street




8 Current audio information

9 Options for route and map setting

10 Voice guidance On/Off

INTRODUCTION TO THE CONTROLS (1/2)

Screen selections are made by touching the desired selection on the screen.

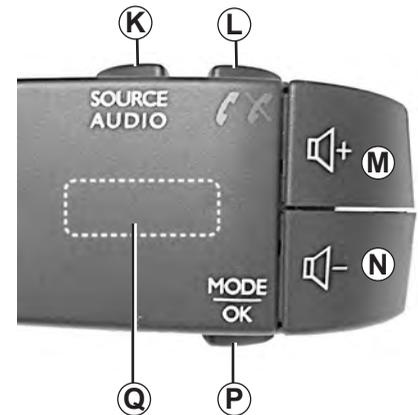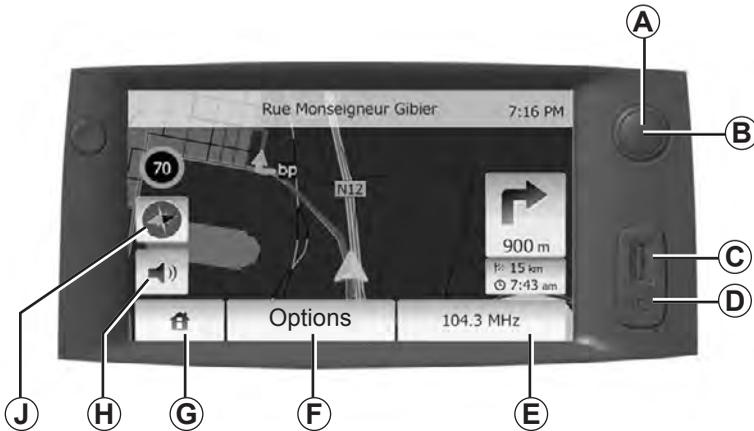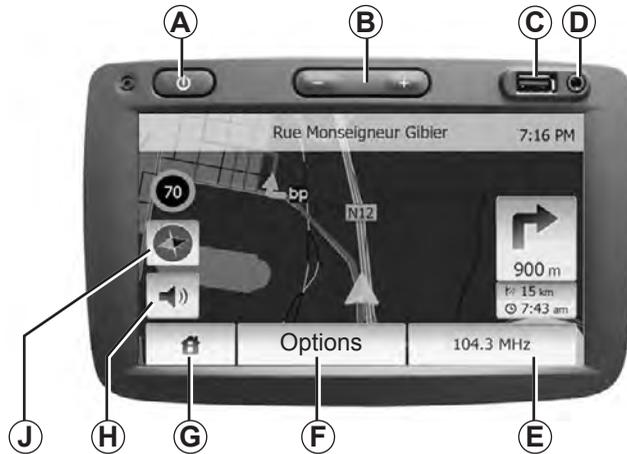

INTRODUCTION TO THE CONTROLS (2/2)

	Function
A	Short press: standby screen mode On/Off
B, M/N	Adjust the volume
C	USB socket
D	3.5mm Jack socket
E	Access the current media (Radio, AUX) source
F	Access the option menu
G	Access the home menu
H	Mute/unmute the voice guidance
J	Change the map view mode (2D/3D)
K	1st press: access functions for the source currently in use. Successive presses: select the audio source (Radio, AUX)
L	Answer/end a call
M+N	Mute/unmute the sound
P	Change mode for choosing a radio station (Main, List, Preset)
Q	Radio: search for a radio station
	Media: search for audio track

SWITCH ON/OFF



Switching on

The multimedia system switches on automatically when the ignition is switched on.

In other cases, press button **A** to switch on the multimedia system.

With the ignition off, you can use the system for 20 minutes.

Press **A** to make the multimedia system operate for about a further 20 minutes.



Switching off

The system switches off automatically when the vehicle's ignition is switched off.



Standby screen

The standby clock mode allows the display screen to be switched off.

When in standby clock mode, the radio or guidance system does not operate.

Press button **A** to activate and briefly press **A** to deactivate the standby screen.

Any **other** action will temporarily reactivate the screen.

OPERATE AND USE (1/2)

Touching screen

Tap (short press):

- Item selection;
- Item execution (Media playing screen).

When touching forwards button, moves toward the next song.

Press and Hold (long press):

- Item store (Radio screen);


When touching with long presses the preset number, stores the current radio channel.

- Move to scroll with acceleration;

When touching with long presses the list down buttons, scroll (per page) with acceleration.


- fast-forward or rewind (Media playing screen).

When touching with long presses forwards or backwards button, fast winding the song.

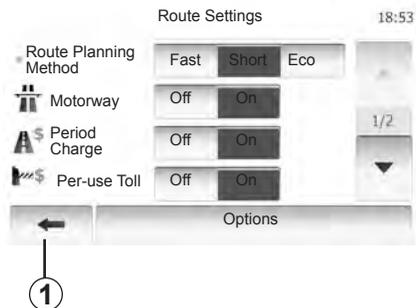

Back to Home menu

System goes back to Home menu directly once you press and hold **1** whenever it is.

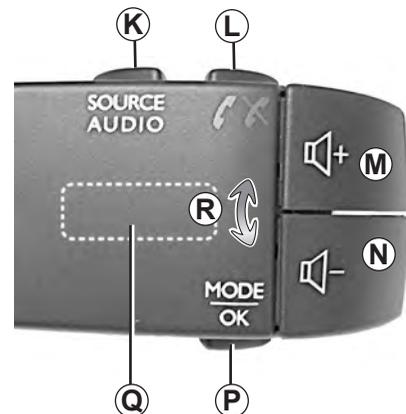


Using the steering column controls

Press button **P** to change the radio station search mode.

Rotate wheel **Q** to change the station (movement **R**).

Press **K** to change the source (AUX, AM, FM).

OPERATE AND USE (2/2)

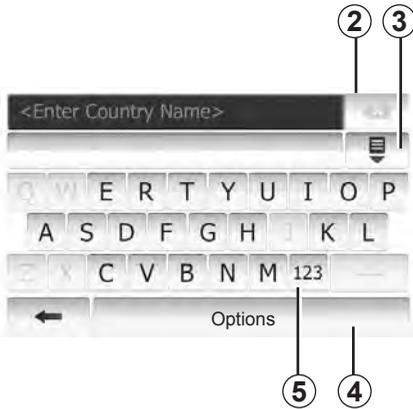

Select **2** to modify your entry.

Select **3** to display list of results.

Select **4** to change the keyboard to special layout.

Select **5** to use numbers and symbols.

Using an alphabetical keyboard

When entering a heading using an alphabetical keyboard, choose each letter by pressing keyboard.

When choosing each letter, the system will remove the brightness of certain letters to help enter the letters.

VOLUME

Volume

Adjust the sound level when listening to the different sources, messages, ringtones and phone communications:

- by pressing or turning **B** (depending on the vehicle);
- or by pressing **M/N**.

The radio source being listened to is interrupted when “TA” information, news bulletins or a warning message is received.



Set the volume to a reasonable level so that outside noise can be heard.

Muting the sound

Press simultaneously on **M/N** to mute the sound.


This function is deactivated automatically when the volume control is used or when a news or road traffic bulletin is broadcast.

Volume adjustment according to speed

When this function is activated, the audio and navigation volume will vary according to the vehicle speed.

To activate and adjust this function, refer to the information on “Speed dependent volume control” of the section on “Audio settings”.

LISTEN TO THE RADIO (1/3)

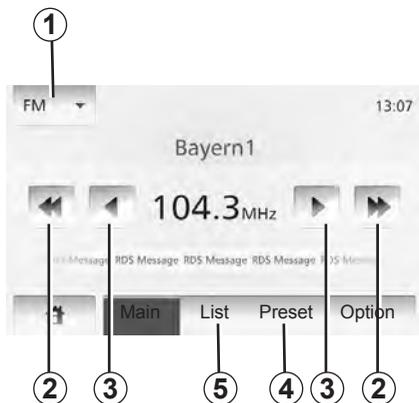

Selecting a wavelength


Press **1**.

Select the wavelength (FM or AM) required by pressing it.

Choosing a station

There are different modes for choosing a radio station.

After having selected the wavelength, select the mode by pressing **4** or **5**.

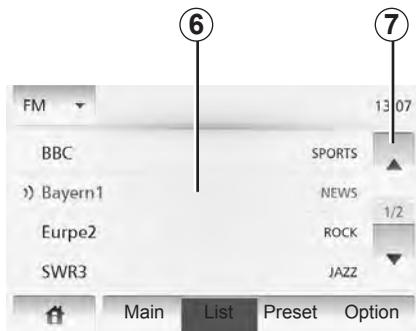

List mode

Select the List mode by pressing **5**.


This operating mode allows you to find a station easily by name from an alphabetical list (with FM only).

It is possible to scan up to 50 available radio stations.

Select the stations required by pressing zone **6**

Press **7** to scroll through all the stations.

The names of the radio stations that do not use RDS will not appear on the screen. Only their frequency is displayed and sorted at the end of the list.

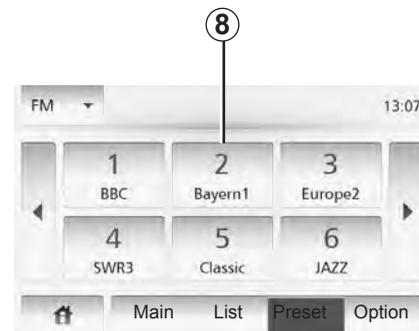

Preset mode

Select the Preset mode by pressing **4**.

This operation mode allows you to recall on demand those stations which you have already stored (refer to information on “Storing a station” in this section).

Press zone **8** to select your stored stations.

LISTEN TO THE RADIO (2/3)



MANUAL mode


This mode allows stations to be searched manually by scanning the selected wavelength.

Scan the wavelength (advancing in increments of 0.5) by repeatedly pressing **3**.

Briefly press **2** to start an automatic search for radio stations.

Repeat the operation each time the search stops if necessary.

You can also move wheel **Q** to launch an automatic station search.

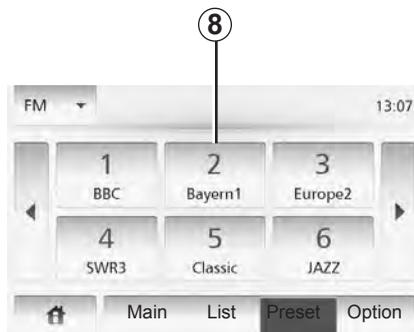


Storing a station

Select a radio station by using one of the modes described above.

Press and hold one of the buttons on the zone **8**.

You can store up to 12 stations per wavelength.

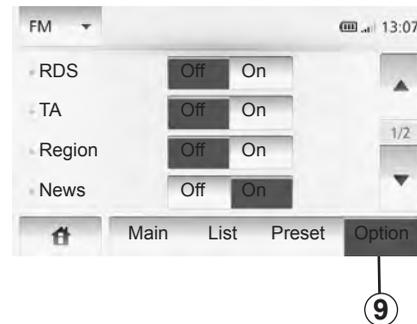

Radio settings

Display the settings menu by pressing **9**. You can activate or deactivate functions by pressing "On" or "Off" (the setting menu varies depending on the wavelength).

- RDS
- TA (Traffic announcement)
- Region
- News
- AM
- Update List

LISTEN TO THE RADIO (3/3)

RDS

Some FM radio stations broadcast text information relating to the programme being listened to (the name of a track, for example).

Note: this information is only available on some radio stations.

TA (Traffic announcement)

When this function is activated, your audio system makes it possible to automatically search for and listen to traffic information when they are broadcast from certain FM radio stations.

Once the function is activated, select the news station then choose if you require another playback source.

Traffic information is broadcast automatically and has priority over the source being listened to at the time. The automatic broadcasts will not operate when listening to radio stations on the AM wavelength.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

Region

The frequency of an FM radio station may change depending on the geographical area.

In order to keep listening to the same radio station when driving, activate the Region function so that your audio system can automatically retune the frequency.

Note: not all radio stations offer this possibility.

Poor reception can sometimes cause erratic and annoying changes in frequency. In this case you should deactivate this function.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

News

When this function is activated, it is possible to automatically listen to news when they are broadcast by certain FM radio stations (depending on country).

If you then select the other sources, when a broadcast of the selected programme type is made, it will interrupt the other sources.

To activate/deactivate this function, refer to information on “Radio settings” in this section.

AM

You can activate or deactivate the AM wavelength. To activate/deactivate this function, refer to information on “Radio settings” in this section

Update List

To update the list of stations and obtain the most recent ones, press “Start” (only for FM).

AUXILIARY AUDIO SOURCES (1/3)

Your system is fitted with an audio multiconnection unit comprising two auxiliary inputs for connecting an external audio source (MP3 player, portable audio player, USB key etc.).

To find the input position, please refer to the section on “Introduction to the controls”.


Principles of operation Connection

There are two types of connections:

- a USB socket,
- a jack.

Connect your portable audio player, depending on the type of device.

Once you have connected a USB socket or jack, the system automatically detects the auxiliary source.

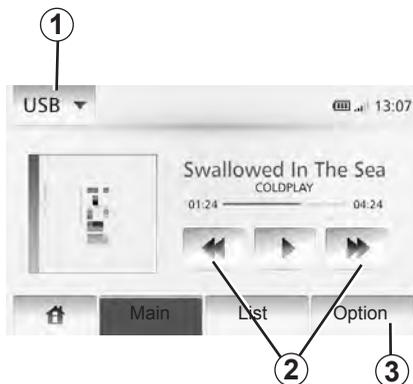

Selecting an auxiliary source

In navigation mode or when listening to the radio, select your auxiliary audio source by pressing “Home” > “MEDIA”. The system starts playing the last audio track played.

Note: any change to the external audio source which is made when the system is not active will not be automatically taken into account.

To change the auxiliary source, tap **1** to show the list of auxiliary sources and then tap the desired auxiliary source from the following possibilities:

- USB;
- iPod®;
- BT: Bluetooth® devices;
- AUX: 3.5mm jack.

Audio formats

The auxiliary audio source formats include MP3 and WMA...

Fast winding

Press and hold **2** to fast forward or rewind.

Playback resumes when the button is released.

Repeat

This function allows you to repeat one song or all songs.

Tap **3** and then tap “Off”, “Track”, or “All”.

Shuffle

This function allows you to play all songs randomly. Tap **3** and then tap “On”, “Off” or “Folder”.



Only handle the portable audio player when traffic conditions permit.
Store the portable audio player safely while driving (risk of being thrown in the event of sudden braking).

AUXILIARY AUDIO SOURCES (2/3)

Auxiliary input: USB socket, Bluetooth®

Connect the socket of your portable audio player to the USB input on the unit.

Connection: USB and portable digital audio player

Connect the socket of your portable audio player to the USB input on the unit.

Once the USB socket of the digital portable audio player is connected, the “USB” menu is displayed.


Note: depending on the digital portable audio player, some digital portable audio player may not be connected.

Connection: iPod®

Connect the socket of your iPod® to the USB input on the unit.

Once the USB socket of the iPod® devices is connected, the “iPod” menu is displayed.

Note: use the iPod® cable for exclusive use of iPod® when connecting iPod® to the USB socket.

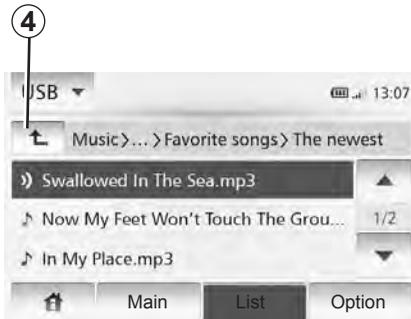

Connection: Bluetooth®

Refer to the section on “Connecting/disconnecting Bluetooth® devices”.

Once Bluetooth® is connected, the “BT” menu is displayed.

Use

Depending on the type of portable audio player, select a folder (MP3 player, USB key) or a playlist (portable digital music player).

Note: once connected, you can no longer directly control your portable digital audio player. You must use the keys on the system’s front panel.

Selecting a track

To select an audio track within a folder, tap “List”.

To go back to the previous level in the folder hierarchy, tap **4**.

By default, albums are listed in alphabetical order.

Note: if you connect a USB key, all the folders will be at the same level on the tree structure.

Depending on the type of digital portable audio player, you can refine your selection by using folders or files.

AUXILIARY AUDIO SOURCES (3/3)

Auxiliary input: jack

Connection

Connect the jack of your portable audio player to the jack input.


Use

No indication of the name of the artist or the track is displayed on the system's screen.

Note: you cannot select a track directly from your audio system.

To select a track, you must do so directly via your portable audio player, when the vehicle is stationary.


AUDIO SETTING

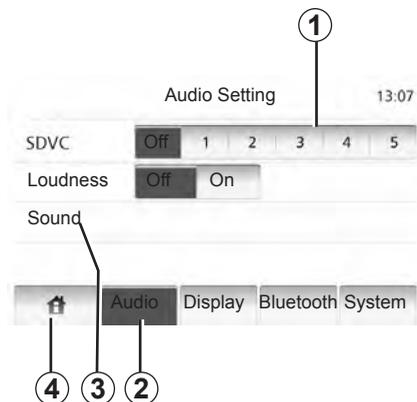

Display the settings menu by pressing “Home” > “SETTING”. Tap **2**.

Note: the system exits the settings mode automatically without the need for any action on the part of the user.

You can also exit the settings mode by pressing **4**.

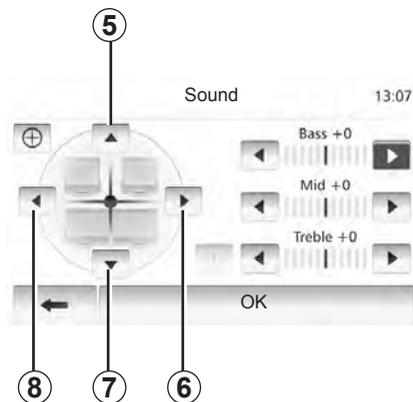

SDVC (Speed Dependent Volume Control)

When the speed of your vehicle is more than 40km/h, the volume level outputs higher than original volume level.

Adjust the volume/speed ratio by pressing zone **1**.

Loudness

Tap “Off” or “On” to turn off or on the loudness.

Sound

Display the sound menu by pressing **3**.

Right/left and front/rear balance

Tap **6** or **8** to adjust the sound the left/right balance.

Tap **5** or **7** to adjust the sound the front/rear balance.

After setting balance, tap “OK”.

Bass, Mid, Treble

Tap left arrow or right arrow to adjust the Bass, Mid or Treble.

After setting Bass, Mid or Treble, tap “OK”.

THE NAVIGATION SYSTEM

The navigation system

The navigation system calculates your position and guides you by using data:

- from the GPS receiver;
- from the digital map.

The GPS receiver

The navigation system uses GPS (Global Positioning System) satellites orbiting the Earth.

The GPS receiver receives signals transmitted from several satellites. The system can then locate the position of the vehicle.

Note: after moving a long distance without driving (ferry, rail freight), the system may take several minutes to adjust before retuning to normal operation.

The digital map

The digital map contains the road maps and town maps that the system requires.

“Map” USB key

The most recent version is installed by inserting your USB key into a computer that is connected to the internet. Refer to the section on “Map update”.

Note: USB key is not supplied with the system.


If possible, always use the most recent version.

Inserting the USB memory

Connect the USB key to the USB input **C** on the unit.



READ A MAP (1/3)

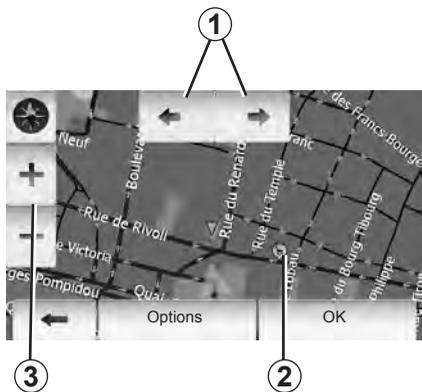

Displaying the map


To display the map around the location of the vehicle, tap "Home" > "MAP".

Touch the map screen.

To move around the navigation map, drag desired direction on the screen.

Tap **3** to change the scale.

Rotate the map by pressing **1**.

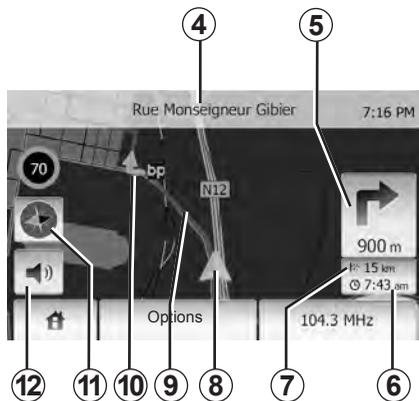

Map key

- 4** Name of the next major road or road sign information, if applicable.
- 5** Distance to and direction of next change of direction.
- 6** Estimated time of arrival
- 7** Distance remaining to the destination
- 8** Location of the vehicle on the navigation map
- 9** Route calculated by the navigation system
- 10** Indicates the direction change

11 Compass

12 Mute voice guidance on/off

GPS Location info

This function makes it possible to find out the geographical location of the selected position (Address/latitude/longitude).

Touch desired position on the screen. Press "Options" and then press "Info" to find out exact location of the selected position.

Compass


It indicates North whatever the position of the map.

Press **11** to change the map view between 2D and 3D.

Map icons

The navigation system uses icons **2** to display points of interest (POI). Refer to the information on "Display points of interest" in the section on "Map settings".

READ A MAP (2/3)

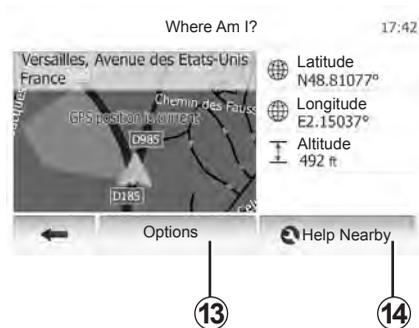

Where am I?

This function allows you to check information about the current position and to search for POI nearby. It operates when GPS is connected.

Tap “Options” on the map screen and then tap “Where Am I?”.

This screen includes information below:

- Latitude;
- Longitude;
- Altitude;
- House number;
- Current address.



Country information

Tap **13** and then tap “Country Info”.

This function allows you to check country information about current position.

Information on this screen includes:

- Speed limits;
Speed limits are displayed for expressways. Displayed unit depends on active regional settings. If data not available, then “--” shown instead of table and number.
- Phone country code;
- Emergency number;
- Legal Restrictions effective in the country:
 - Maximum blood alcohol;
 - Visibility vest required;
 - Fire extinguisher required;
 - Headlights must be on at all times;
 - Spare bulbs required;
 - First aid kit required;
 - Warning triangle required;
 - Helmets required for motorcyclists;
 - Snow chains required in winter;
 - Snow chains recommended in winter;
 - Winter tyres required in winter;
 - Winter tyres recommended in winter.

READ A MAP (3/3)



Help Nearby

This function allows you to search for assistance near your current position.

Tap **14** to open a new screen for the quick search.



Information on this screen:

- Car repair services;
- Medical and emergency services;
- Police stations;
- Gas stations.

To search a destination from this screen, refer to the section on “Entering a destination” and the information on “Select one of the “Points of Interest (POI)””.

ENTERING A DESTINATION (1/6)

Destination menu

Tap “Home” > “NAVI” > “Destination” to access the destination menu.

The destination menu offers several methods to enter a destination:

- enter an address (complete or partial);
- select an address from Points of Interest (POI);
- select a destination from the previous destinations;
- select an address from the Favourites;
- select for destination by using the map;
- select a latitude and longitude.

Entering an address

Tap 1

This item allows you to enter all or part of the address: country, town, street and number.

Note: only addresses known to the system through the digital map are authorised.



When using for the first time:

- Tap the “Country”.
- Tap the keyboard button to enter the name of the country required.

When entering the address the system will remove the brightness of certain letters to help enter the address.

The system may suggest several country lists by pressing 2. Select the required country in the lists.

- Proceed in the same way for “Town/ Suburb”, “Street”, “Intersecting Street” and “Street Number”.




Note: “Intersecting Street” and “Street Number” are activated after select “Street”.

Note: When entering the street, it is not necessary to specify the type of road (street, avenue, boulevard etc).

Note: the system stores previously address in its memory. Once you have entered a destination by address next time, the previous address will be given.

ENTERING A DESTINATION (2/6)

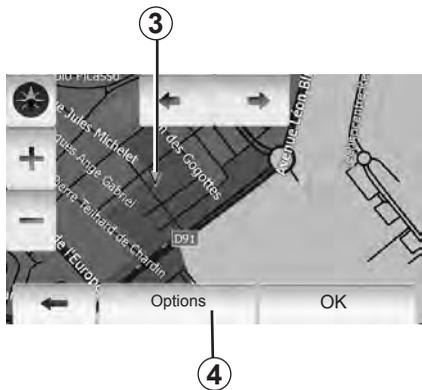

Selecting points of interest (POI)

You can select your destination from the Points of Interest.

You can find a place in different ways:

- with the quick search feature, you can quickly find a nearby place by its name.
- with the preset search feature, you can find frequently searched types of places with only a few screen taps.
- you can search for a place by its category.

Quick search for points of interest

The quick search feature lets you quickly find a place.

Tap the map somewhere to search for points of interest. The point 3 appears.

Tap 4 and then tap “Points of Interest Around Cursor” to show the list of points with names and distance from point 3.

Searching for points of interest using preset categories

The preset search feature lets you quickly find the most frequently selected types of places.


Tap “Home” > “NAVI” > “Destination” > “Points of Interest” to access preset categories.



Categories (petrol station/parking/restaurant)

- If an active route exists, “Petrol Station” and “Restaurant” are searched along the route, and “Parking” is searched around the destination.
- If there is no active route (destination is not selected), they are searched around the current position.
- If the current position is not available either (no GPS signal), they are searched around the last known position.

ENTERING A DESTINATION (3/6)

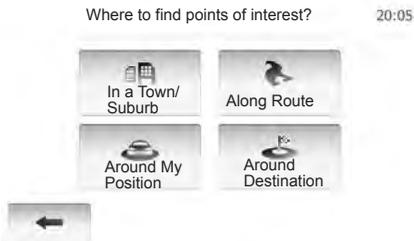

Searching for Points of Interest by category

You can search for Points of Interest by their categories and subcategories.

Tap “Home” > “NAVI” > “Destination” > “Points of Interest” > “Custom Search”.

Select the area around which the place should be searched for:

- Tap “In a Town/Suburb” to search for a place within a selected town/suburb (the result list will be ordered by the distance from the center of the selected city/town).

- Tap “Along Route” to search along the active route, and not around a given point. This is useful when you search for a later stopover that results in a minimal detour only, such as searching for upcoming gas stations or restaurants (the result list will be ordered by the length of the necessary detour).

- Tap “Around My Position” to search around the current position or if it is not available, around the last known position (the result list will be ordered by the distance from this position).

- Tap “Around Destination” to search for a place around the destination of the active route (the result list will be ordered by the distance from the destination).



Selecting a destination from the previous destinations

You can find the destination to a location that you have lastly set as the destination. Tap 5.


ENTERING A DESTINATION (4/6)

Selecting an address from the Favourites

You can find the destination to a location stored in the Favourites. To utilize this function more effectively, destinations that you often travel to should be stored in advance.

First of all, store in the Favourites by searching the address. Refer to the section on “Managing the favourites”.

Tap “Home” > “NAVI” > “Destination” > “Favourites” to display the list of favorite destinations.

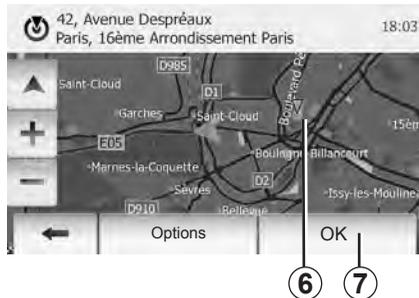


Selecting for destination by using the map

This allows you search for a destination by scrolling the map.

Tap “Home” > “NAVI” > “Destination” > “Find on Map” to select destination on the map.

Tap somewhere on the map that you want to select as your destination. The point **6** appears.

Tap **7** to select the point **6** as the destination.

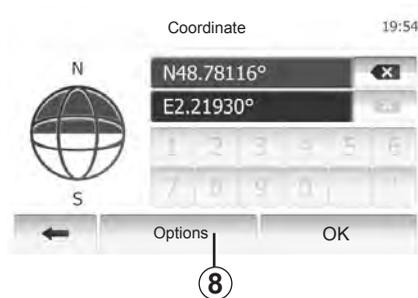

Entering the coordinate of the destination

This allows you search for a destination by entering its coordinate.

Tap “Home” > “NAVI” > “Destination” > “Coordinate”.

You can enter the latitude and longitude values in any of the following formats: decimal degrees; degrees and decimal minutes; or degrees, minutes and decimal seconds.

Tap **8** and then tap “UTM” to enter the coordinate in UTM format.

ENTERING A DESTINATION (5/6)




Sorting the list

The result of searching a destination by point of interest, history and favourites can be sorted by name and distance. If an active route exists, they can be sorted by detour. And they also can be shown all on map. Tap **9**.

Finding a destination by names

In case of selecting a destination by point of interest, history and favourites, you can search for destination in the list by their names. Tap **10** and enter names using keyboard.

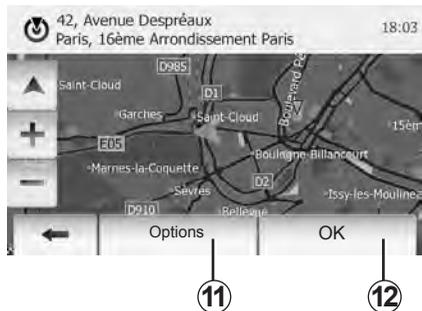

Confirming the destination

There are several possible options before confirming a destination:

- OK;
- Add to favourites;
- Info;
- Back to Car.




OK

- If there is no active route (destination is not selected), tap **12** to confirm the destination as a new route.
- If an active route exists, you can select the destination as a new route or waypoint. Tap **12** and then tap “New Route” or “Waypoint”.

Add to favourites

Tap **11** and then tap **13** to store selected destination in favourites.

ENTERING A DESTINATION (6/6)

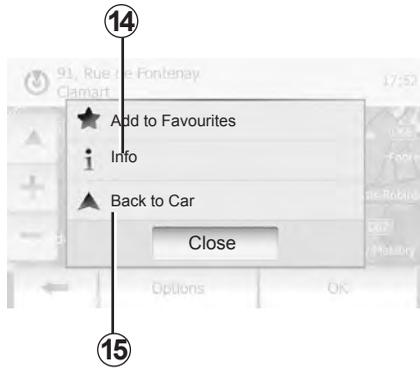


Info

This item allows you to consult the address, latitude, longitude and phone number (phone number is only activated after selecting a point of interest). Tap **14**.

Back to car

Tap **15** to move current vehicle location.


GUIDANCE (1/5)

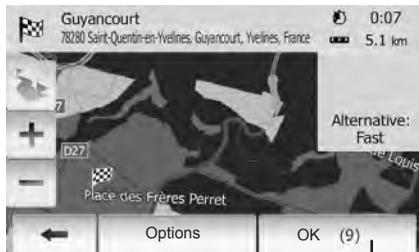

1

Activating guidance

Tap **1** or wait 10 seconds after having entered a destination. Guidance will begin.

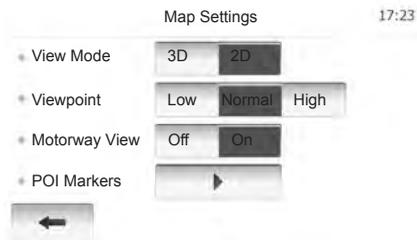

Guidance screens


The system will offer several different navigation maps.

Tap “Home” > “Options” > “Map Settings” and then tap “2D” or “3D” to change the map display.

You can also change the map display by pressing compass on the map.

The different possible full screen displays are:

- 2D;
- 3D.

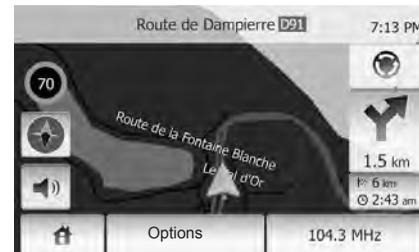

Full screen mode (2D or 3D)

This mode allows you to view the navigation map on the entire screen.

The information on the arrival time and the distance remaining to the destination are located in the bottom right of the map.

The indication for the next change of direction is located in the right side of the map.

GUIDANCE (2/5)



Intersection map

During guidance, before each change of direction, the system will automatically display a close-up of the intersection.

The system will automatically switch back to normal scale after you have passed through the intersection.




Motorway junction view

During guidance, before each motorway junction, this system will display a 3-dimensional view of the junction.

Note: for some junctions, only a small turn arrow will appear on the map.

The system will switch back to normal mode after you have passed the junction.

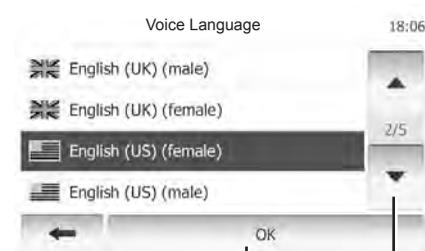

Changing voice guidance language

Tap **2** and then tap “Options” > “Voice Settings” to change voice language.

Scroll the language list by pressing **4**. Tap the desired language and then tap **3** to confirm.

GUIDANCE (3/5)

Route information

This function allows you to view your route.

Select “Home” > “Route” after having entered a destination.

Six choices will be given:


- “Edit Route”,
- “Avoidances”,
- “Overview”,
- “Cancel Route”,
- “Route Alternatives”,
- “Itinerary”.

Route overview

Tap “Home” > “Route” > “Overview” to get a map overview of the active route.

The following information will be given:


- The name and/or address of the destination;
- The total time of the route;
- The total distance of the route;
- The special points and sections of the route (e.g. toll gates, period charge roads, highways, etc);
- The route alternatives (e.g. Short, Fast, Economical).

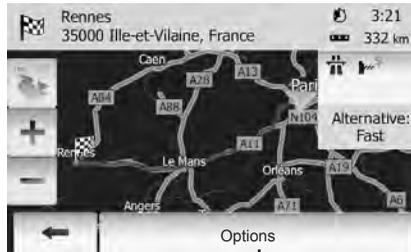

You have the following options on this screen by pressing **5**.

- Route Alternatives.
- Itinerary.
- Route settings.

Note: for more information, refer to the section on next page.

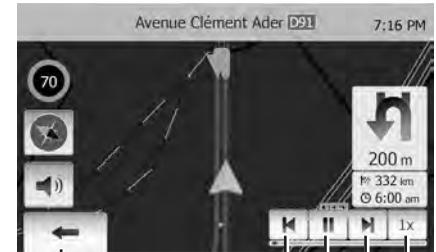


- Simulate Navigation

This function allows you to quickly view the required route. Start or pause the simulation by pressing **8**.

Tap **10** to increase the speed of the simulation.

You can leave the route simulation at any given moment by pressing **6**. You can move to previous/next manoeuvre by pressing **7** or **9**.

GUIDANCE (4/5)

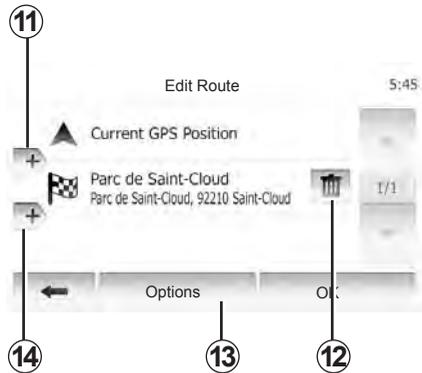


Edit route

Tap “Home” > “Route” > “Edit Route” to edit the route by modifying the list of waypoints. You can add or remove waypoints, reorder the list.

Tap **11** to add waypoints and tap **14** to add a new destination. It offers several methods to enter a destination. Refer to the information on “Entering a destination”.

Tap **12** to delete a destination.

Tap **13** to reorder the list.

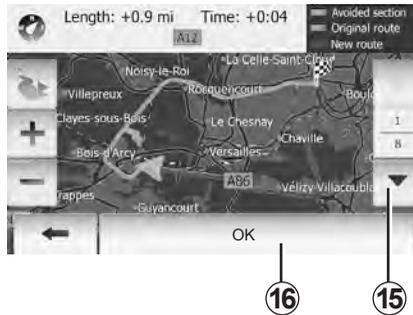

Avoidances

Tap “Home” > “Route” > “Avoidances” to make a detour. Tap a section on the list you want to make a detour.


You can change the section by pressing **15**.

Confirm the new route by pressing **16**.

Cancel the route

At any given moment, you can stop the guidance.

Tap “Home” > “Route” > “Cancel Route” to cancel the active route.

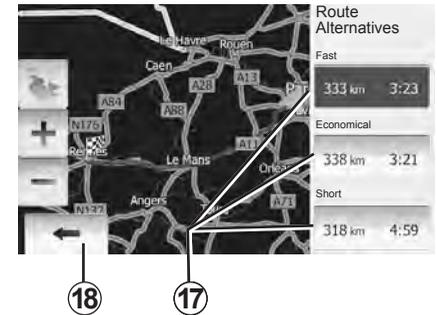

Route Alternatives

This item allows you to change route planning method.

There are three options with distance and time to change route planning method:


- Fast;
- Economical;
- Short.

Refer to the information on “Route settings” in the section on “Navigation settings”.

Tap “Home” > “Route” > “Route Alternatives” and then tap **17**.

Confirm the new route by pressing **18**.

GUIDANCE (5/5)

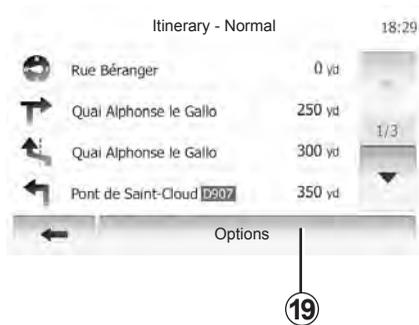

Itinerary

This function makes it possible to view the route plan.

Several details of the route will appear:

- direction change arrows,
- road number,
- distance before a fork.

Tap **19** to sort the details of the route:

- by summary;

It only shows the waypoints (start, via, destination) and their distance, remaining time and arrival time.

- by normal;

It shows all the maneuvers and their signpost information, route numbers, street name and distance. It also shows informational and warning entries, such as settlement names the driver enters, restrictions (access and maneuver restrictions), ignored user preferences, etc.

- by road list.


It sections the route to road names and road numbers. It also shows their length, average direction and travel time information. Waypoints are not shown in this mode.

Route settings

This item enables you to choose your route settings.

Refer to the information on “Route settings” in the section entitled “Navigation settings”.

MAP SETTINGS

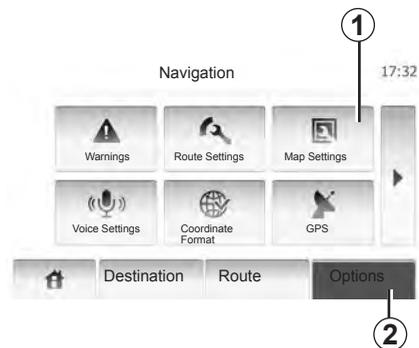


Tap **2** and then tap **1** to access map setting menu.

Adjusting view mode

This function allows you to switch the map view between a 3D perspective view and a 2D top-down view.

Tap “3D” or “2D”.

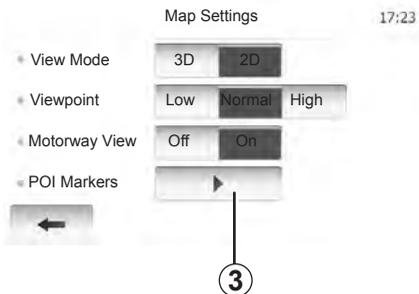

Adjusting viewpoint

This function allows you to adjust the basic zoom and tilt levels to your needs. Three levels are available.

Tap “Low”, “Normal” or “High”.

Motorway View

This function allows you to activate or deactivate motorway view.

Tap “On” or “Off”.

Display points of interest

You can select certain points of interest (visible at 100 m scale) to be displayed on the map.

To access this function directly, Tap **3** to display the points of interest on the map:

- Accommodation;
- Airport;
- Automotive;
- Business;
- Cafe or Bar;
- etc.

Tap “On” or “Off” to show or hide the points of interest.

Tap the name of the point of interest to open the list of its subcategories.

MANAGING THE FAVOURITES (1/2)




Creating an entry

Tap "Home" > "Destination" to access the destination menu. Enter a destination by using several methods.

- Address: refer to the information on "Entering an address" in the section on "Entering a destination".
- Point of interest: refer to the information on "Selecting a point of interest (POI)" in the section entitled "Entering a destination".

- Address: refer to the information on "Entering an address" in the section on "Entering a destination".
- History: refer to the information on "Select a destination from the previous destinations" in the section entitled "Entering a destination".
- Find on Map: refer to the information on "Selecting a destination on the map" in the section on "Entering a destination".
- Coordinate: refer to the information on "Entering the coordinate of the destination" in the section on "Entering a destination".

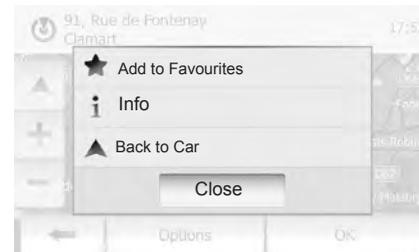

In all cases, once the address is confirmed, the system will locate it on the map. Tap "Options" and then tap "Add to Favourites" to the destination as favourites.

Before saving favourites, you can change the name of the favourite by using keyboard.

MANAGING THE FAVOURITES (2/2)



Sorting the list

The result of saved favourites can be sorted by name, distance, and shown all on map. Tap “Options”. Tap “Options”.

Deleting the favourites

Tap the favourite you want to delete. Tap “Options”, “Delete Favourite” and confirm by pressing “Delete”.

To delete all favourites, tap “Options” and then tap “Delete all”. Confirm by pressing “Delete all”.

Searching the favourite

This function allows you to search the favourite in the list by its saved name.

Tap “Find” and enter the name of the favourite by using keyboard.

NAVIGATION SETTINGS (1/4)



The “Navigation Settings” menu allows you to change the display of the map or navigation parameters.

Warnings

This item allows you to set up warnings. Tap **1** to access menu of warnings.

Warn when speeding

Maps may contain information about the speed limits of the road segments. The system is able to warn you if you exceed the current limit. This information may not be available for your region or may not be fully correct for all roads in the map.



The following alert types are available:

- Audio warning: you receive a non-verbal warning when you exceed the speed limit.
- Visual warning: the current speed limit is shown on the map when you exceed it.

Tap “On” or “Off” to turn on or off the warning.

Speed limit always visible

You can set speed limits always visible. This function can be turned on or off in this menu.

Alert point warnings

When the driver passes an alert point, a warning sign appears on the screen. This function can be turned on or off in this menu.

NAVIGATION SETTINGS (2/4)



Route settings


This function allows you to set how routes will be calculated.

Tap **2** to access menu of route setting.

Route planning method

This system will offer 3 main route priority criteria:

- Fast: gives a quick route if you can travel at or near the speed limit on all roads;
- Short: gives a short route to minimise the distance to travel;

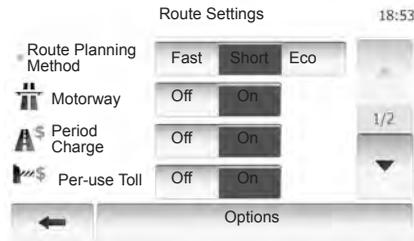

- Eco: this mode produces a compromise between fast and short routing modes. If you can save a certain distance by travelling for slightly longer time in exchange, it will do just that. The resulting route might be shorter than the fast variant, but not significantly slower.

Motorways

You might need to avoid motorways when you are driving a slow car or you are towing another vehicle.

Period charge

It enables or disables the use of roads for which a special license has to be purchased in order to make use of these roads during a certain period.

Per-use toll

It enables or disables the use of roads for which toll has to be paid to use only once a certain part of a road.

Ferries

It enables or disables the usage of all types of ferries, ships and trains.

Unsealed roads

It enables or disables the use of unpaved roads.

NAVIGATION SETTINGS (3/4)

Permit needed

It enables or disables the use of roads which are situated in not publicly accessible areas.

Border crossing

If it is disabled and the Start and Destination waypoints are in the same country, then the roads that are outside of the country are disabled.

Note: permit needed and border crossing options are available only if the corresponding segments are included in the planned route.



Map settings

Refer to the information in the section on “Map settings”.

Voice settings

This function allows you to change the language of voice guidance.



Coordinate format

This function allows you to change the format of coordinate.

Tap **3** to change the format of coordinate.

This system will offer 3 types of format.

NAVIGATION SETTINGS (4/4)




GPS

This function allows you to check the status of GPS satellites.

Tap **4** to see the GPS information (screen **A**).

A

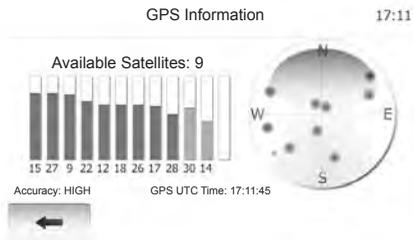

PAIRING, UNPAIRING BLUETOOTH® DEVICES (1/2)

Bluetooth® connection

Check that the Bluetooth® connection is “ON”. To do this, Tap “Home” > “SETTING”, select “Bluetooth”.

Pairing Bluetooth® device


In order to use your hands-free system, you must pair your Bluetooth® mobile to your vehicle before using it for the first time.

Pairing will enable the system to recognise and store a device. You can pair up to 8 devices, but only one can be connected at a time to the hands-free system.

Pairing is carried out directly on your device.



Your hands-free system is only intended to facilitate communication by reducing the risk factors, without removing them completely. You must always comply with the laws of the country in which you are travelling.

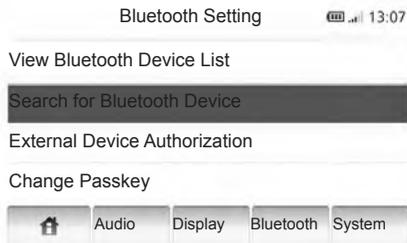

Your multimedia system and device must both be switched on.

Note: when pairing, ensure any other devices already paired are not connected to the hands-free system.

Tap “Search for Bluetooth Device” or “External Device Authorization” on the screen or tap **1** on phone screen.

From your device, carry out the procedure in the following order:

- activate the device’s Bluetooth® connection;
- run a search for Bluetooth® devices in close proximity;




- select “MEDIA-NAV” (Name of hands-free system) from the list;
- enter the Bluetooth® code “0000” on the device keypad.

Note: the Bluetooth® code “0000” is default. You can change the code by pressing “Change Passkey” on the screen.

Note: some devices don’t need to enter the Bluetooth® code.

The device is automatically stored and connected to the vehicle. If pairing fails, repeat these operations. For more information, refer to your device’s user guide.

PAIRING, UNPAIRING BLUETOOTH® DEVICES (2/2)

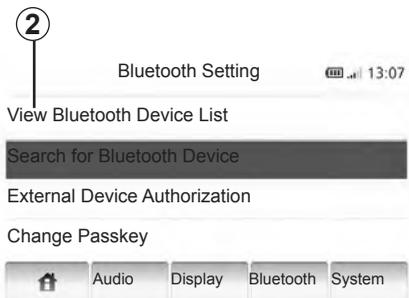

Tap **2**. Tap the trash can icon on the device to be deleted in the list. Confirm your choice by selecting “OK”.

You can also delete all device in the list by pressing “Options”, “Delete all” and confirm your choice by selecting “OK”.

Unpairing Bluetooth® device

Unpairing erases a device from the hands-free system memory.

CONNECTING, DISCONNECTING BLUETOOTH® DEVICES

Connecting a Bluetooth® device

Your device must be connected to the hands-free system in order to use all its functions.

It is not possible to connect a device to the hands-free system if it has not first been paired. Refer to the information on “Pairing/unpairing Bluetooth® devices”.

Once the system is initiated, the hands-free system will search for any paired devices present in the vicinity (the search may take a minute).

A message will indicate that the phone is connected. If a call is in progress when the connection is made, it is transferred to the vehicle speakers.

Connection failure

If connection fails, check that:

- the device is configured to accept the system’s connection request;
- your device is switched on;
- your device battery is not flat;
- your device has been paired to the hands-free system;
- the Bluetooth® for your device and the system are activated.

Note: Using your hands-free system for prolonged periods of time will discharge your device’s battery more quickly.

Changing a connected phone

The multimedia system can store up to 8 Bluetooth® devices.

You can connect/disconnect one of the 8 Bluetooth® devices at any time.

Tap “Home” > “SETTING”, select “Bluetooth”. Tap “View Bluetooth Device List”.

Tap the device to be connected and confirm by pressing “OK”

If a call is in progress when the phone is disconnected, the call will automatically switch to your phone.

PHONE BOOK



Tap **1** to scroll the list and then tap “Phone Book” to access the system’s Phone Book.

Using your Phone Book

You can use the Phone Book entries stored on the memory of phone.

After connecting your system and bluetooth phone via Bluetooth® wireless technology, the numbers in your phone’s Phone Book is transferred automatically into system’s Phone Book.

Note: system may ask whether to transfer phone’s Phone Book into system’s Phone Book in certain phones.

Calling a number in the Phone Book

After finding the contact in the Phone Book you want to call, you can select the number and make a call.

Searching the Phone Book contact by alphabet

If there are many contacts in the Phone Book list, it can be useful to display them in the alphabetical order for easier searching.

Tap **2** and then enter the name of contact you want to search by using keyboard.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

MAKING A CALL



Dialling a number from the phonebook

Refer to the information on “Calling a number in the phonebook” in the section on “Phonebook”.



It is recommended that you stop your vehicle before entering a number or searching for a contact.

Dialling a number from the call history

You can use the calling list stored on the memory of phone.

After connecting your unit and Bluetooth® phone via Bluetooth® wireless technology, the numbers in your phone’s All Calls, Outgoing Calls, Incoming Calls, and Missed Calls list is transferred automatically into calling list.

Tap **1** to scroll the list and then tap “Calling Lists”.


Tap **5** to access to the list of All Calls.

Tap **4** to access the list of Outgoing Calls.

Tap **3** to access the list of Incoming Calls.

Tap **2** to access the list of Missed Calls.

For each list, the contacts are listed from the most recent to the oldest. Select a contact to make the call.

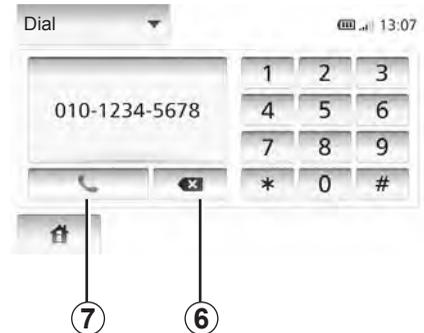

Entering a number

Tap **1** to scroll the list and then tap “Dial” to make a call entering a number.

Tap the number buttons to make a call and then tap **7**

To correct a number tap **6**. Press and hold **6** to delete all the numbers at once.


RECEIVING, DURING A CALL



Receiving a call

When receiving a call, the reception screen is displayed with any information available on the caller:

- the name of the contact (if the number is present in the phonebook list);
- the caller's number;
- "Unknown" (if the number cannot be viewed).

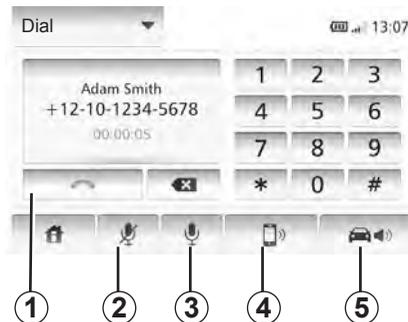


During a call

During a call you can:

- switch the microphone on/off by pressing **2** or **3**;
- hang up by pressing **1**;
- hear sound through the phone speaker by pressing **4**;
- hear sound through the vehicle speaker by pressing **5**;

SYSTEM SETTINGS (1/2)

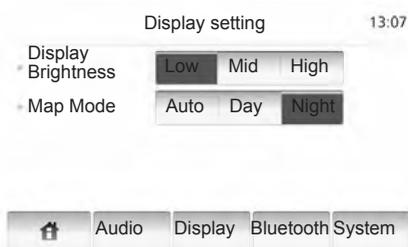

To access the system parameters:


- Tap “Home”, “SETTING”;
- tap the menu on the bottom of the screen;
- select an item.

Display setting

Display brightness

You can set the brightness of the screen.

Set the display brightness to Low, Mid (Middle), or High.

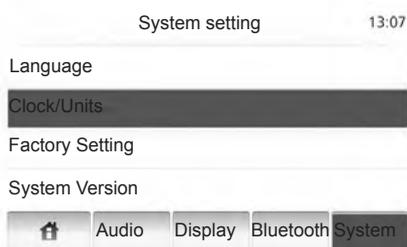

Map mode

To improve the visibility of the map screen between day and night, you can change the combination of the colours of the map.

- Auto: The map screen is displayed by GPS. Day and night mode automatically are changed.
- Day: The map screen is always displayed with bright colours.
- Night: The map screen is always displayed with dark colours.

System setting

Language

This function allows you to change the language used in the system and voice guidance language.

Clock

This function allows you to set the time format between the “12h” and “24h”.

Note: clock is configured automatically by the GPS and it is not possible to change it manually.

Units

This function allows you to set the unit of distance displayed on your navigation system. You can change the unit between the “km” and “mils”.

SYSTEM SETTINGS (2/2)

Factory Setting

This function allows you to initialize various settings to the default settings.

- All: Initializes all the settings to the default settings.
- Phone: Initializes all the settings related with phone.
- Navigation: Initializes all the settings related with navigation.
- Audio/Media/Radio: Initializes all the settings related with Audio/Media/Radio.

System Version

This function allows you to check the version of system.

Audio setting

Refer to the section entitled “Audio setting”

Bluetooth setting

Refer to the section entitled “Pairing/unpairing Bluetooth® devices”.

UPDATING THE SYSTEM (1/4)



By inserting your USB key into a computer that is connected to the internet, you can:

- update your map content;
- update the system;
- purchase new maps;
- upgrade to premium POI content.

The screens shown in the user manual are not contractual.

Installing the software

Install the Naviextras Toolbox in a few clicks on your computer. The Toolbox can be downloaded from:

- <https://renault.naviextras.com/toolbox>
- <https://dacia.naviextras.com/toolbox>

After downloading the install file from website, simply double-click the file to start the installation.

Follow the instructions shown on the screen.

Creating an internet account

To log in, click the “Not logged in” icon in the toolbar at the top of the page or click the Login button in the Toolbox main screen. In case you are not registered on Naviextras.com website, you can easily do that from Toolbox by clicking on the “Register” button on the login page.



Latest map guarantee

Once your new vehicle has been delivered, you will have a maximum of 90 days in which to update the map for free. Once this time has elapsed, you will need to pay for updates.

The screens shown in the user manual are not contractual.

UPDATING THE SYSTEM (2/4)

Registering the system with the Toolbox

To register your navigation system to your user profile, first you have to take an empty USB key to the navigation system.

Note: to insert the USB key, please refer to the section on the “The navigation system” in your notice, and specifically the information on “Inserting the USB memory”.

Note: USB key is not supplied with the system.

Note: at least a 4GB storage size of USB key is recommended.



When the USB key is inserted into the navigation system's USB socket, you have to select “NAVI” > “Options” > “Map update” > “Update” button on the system's menu.

This creates a fingerprint of your navigation system to the USB key which is going to be used by the Toolbox to register your system to your account and to let the Toolbox determine which updates are available for your system.

Connect your USB key to your computer (the computer must already be connected to the internet). When your system is successfully connected and the Toolbox finds it in the list of supported systems, the system (or software) name will appear at the top of the Toolbox window.

If you have followed the instructions, and successfully connected your USB key and then logged in, then your system is already registered into your user profile.

UPDATING THE SYSTEM (3/4)

Downloading updates to the USB key

If you purchased any free or pay contents, please click on the updates button in the menu bar on the left side of Toolbox.

The updates button will open a screen which shows all available updates, including:

- items that you have purchased but not yet installed (updates or extras);
- free updates and extras that you added to the installation queue from the Catalogue;
- system updates (if a newer version available);
- and special free updates.

The list shows all available updates by region in a list and on a world map.

By default, all items belonging to all regions are selected for installation. If you decide to skip a region for now, uncheck the checkbox at the beginning of its table row. After reviewing the table, click Install at the bottom of the screen to start the installation process.

The Toolbox will start downloading and installing the selected updates. Please wait until you receive a message that the operation is completed.

The Toolbox warns you if the selected items exceed the maximum storage of navigation system. In this case, you can select which items can be installed or removed in the system so that it does not exceed the storage limit.

Even if items are removed in the system, you still have ownership of items and can install them later for free.



In certain countries it is illegal to download and activate the speed camera warnings and this could lead to prosecution.


UPDATING THE SYSTEM (4/4)

Updating the system and map

When the process of downloading is done, the USB key can be removed from the computer. Bring it back to the navigation system and insert the USB key to the system's USB socket.

When the system is turned on, it automatically notices the available updates on the USB key, and offers to update the system or map from the updates found on the USB key.

Note: downloading and installing a system update is only possible, if there is a newer version available.

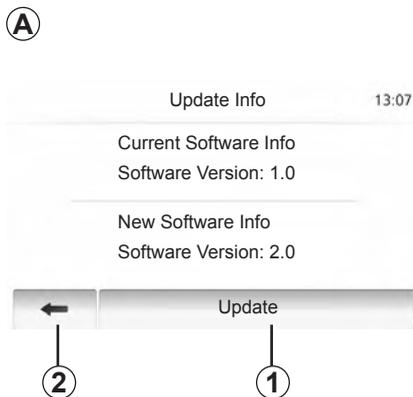

- Screen **A** is displayed automatically once the USB key is connected.
- Tap **1** to start update.
Tap **2** to go back to previous screen.

The update procedure starts automatically. Do not use any of the system functions during the update procedure.

When the update is completed, the navigation system restarts with all new and up to date functionality.

Please neither remove the USB key from the system, nor shut the system down while update is in progress.

The system might be restarted automatically during the update process. Please wait to display the radio screen.

If the update is accidentally interrupted, restart the process from the beginning.

OPERATING FAULTS (1/2)

System		
Description	Causes	Solutions
No image is displayed.	The screen is on standby.	Ensure that the screen is not on standby.
No sound can be heard.	The volume is set to minimum or mute.	Increase the volume or deactivate mute.
No sound comes from the left, right, front or rear speakers.	The balance or fader settings are incorrect.	Adjust the sound balance or fader correctly.

Navigation		
Description	Causes	Solutions
The location of the vehicle on the screen does not correspond to its actual location.	Incorrect positioning of the vehicle caused by GPS reception.	Move the vehicle until reception of the GPS signal is improved.
The directions on the screen do not correspond to the actual road.	The version of system is out of date.	Obtain the latest version of the system.
Certain items on the menu are not available.	Depending on the current command, some items will be unavailable.	

OPERATING FAULTS (2/2)

Navigation		
Description	Causes	Solutions
Voice guidance is unavailable.	The navigation system does not include the intersection. Voice guidance is deactivated.	Increase the volume. Ensure voice guidance is activated.
The directions of the voice guidance do not correspond to your exact location.	The voice guidance may vary according to the environment.	Drive according to the actual conditions.
The suggested route does not start or end at the required destination.	The destination is not yet recognised by the system.	Enter a road near to the required destination.

Phone		
Description	Causes	Solutions
No sounds or ringtone can be heard.	The mobile phone is not connected to the system. The volume is set to minimum or mute.	Ensure that the mobile phone is connected to the system. Increase the volume or deactivate mute.
Impossible to make a call.	The mobile phone is not connected to the system. The phone keypad has been locked.	Ensure that the mobile phone is connected to the system. Unlock the phone keypad.

ALPHABETICAL INDEX (1/2)

A

address book.....GB.28, GB.37 – GB.38
answering a call.....GB.48
ARTIST.....GB.18
AUX.....GB.17 → GB.19
auxiliary source.....GB.17 → GB.19

B

BALANCE.....GB.20
balance.....GB.20
BASS.....GB.20
bass.....GB.20
Bluetooth connection.....GB.45
Bluetooth®.....GB.43, GB.45 – GB.46
Bluetooth® portable audio player
 pairing.....GB.18
 unpairing.....GB.18

C

call.....GB.47
call volume.....GB.13
clock.....GB.49
 display.....GB.49
confirm a destination.....GB.29 – GB.30
connect a telephone.....GB.45
contacts list.....GB.46

D

destination.....GB.25 → GB.30, GB.37 – GB.38
detailed route.....GB.31 → GB.35
detour.....GB.31 → GB.35
dialling.....GB.47
dialling a number.....GB.46

E

entering an address.....GB.25

F

FADER.....GB.20
fast winding.....GB.17
favourite number.....GB.46
FM/LW/MW bandwidths.....GB.14 → GB.16

G

GPS

 receiver.....GB.21, GB.42
 reception.....GB.21
guidance
 activation.....GB.31
 cancellation.....GB.35
 map.....GB.31 → GB.36
 voice.....GB.31 → GB.35

J

Jack socket.....GB.19

L

LIST mode.....GB.14

M

MANU mode.....GB.14
map
 digitised map.....GB.21
 display.....GB.22, GB.36
 scale.....GB.22
 settings.....GB.36, GB.39
map navigation.....GB.36
mute.....GB.13

O

operating faults.....GB.55 – GB.56
operation.....GB.10

ALPHABETICAL INDEX (2/2)

P

pairing a telephone GB.43
POI GB.26 – GB.27, GB.36
point of interest GB.26 – GB.27, GB.36
PRESET mode GB.14 → GB.16

R

range of wavelengths GB.14 → GB.16
RDS GB.5, GB.16
receiving a call GB.48

S

screen
 monitor GB.10
 navigation display GB.31 → GB.35
 navigation screen GB.31 → GB.36
 settings GB.36
setting GB.20
settings GB.40 → GB.42, GB.49 – GB.50
 audio GB.20
 balance GB.20
 brightness GB.49
 fader GB.20
 navigation GB.40 → GB.42
storing a radio station GB.14 → GB.16
switching off GB.10
system
 update GB.51 → GB.54

T

3D/2D mode GB.31
treble GB.20

U

unpairing a telephone GB.44
USB GB.51 → GB.54

USB key GB.51 → GB.54
USB socket GB.18, GB.51 → GB.54

V

volume GB.13
volume: adapted to speed GB.13

W

WMA GB.17

(www.renault-multimedia.com)

RENAULT S.A.S. SOCIÉTÉ PAR ACTIONS SIMPLIFIÉE AU CAPITAL DE 533 941 113 € / 13-15, QUAI LE GALLO
92100 BOULOGNE-BILLANCOURT R.C.S. NANTERRE 780 129 987 — SIRET 780 129 987 03591 / TÉL. : 0810 40 50 60

NX 1023-2 – 77 11 407 139 – 03/2012 – édition anglaise

